


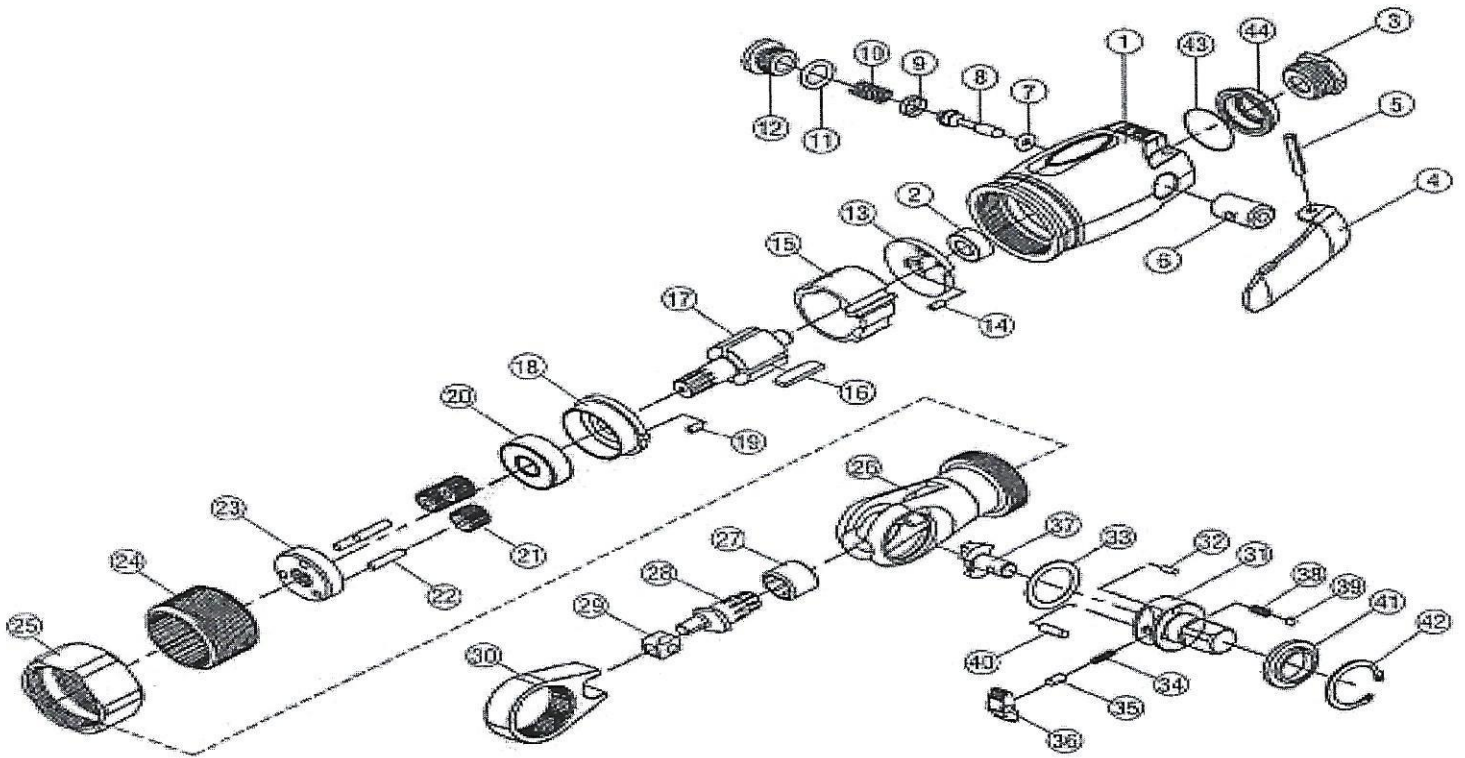

A-1922B 1/4" Ratchet Wre



Index No.	Parts No.	Description	Q"ty	Index No.	Parts No.	Description	Q"ty
1	1922B#01	Motor Housing Assembly	1	23	1922B#23	Gear Head	1
2	1922B#02	Rear Rotor Bearing	1	24	1922B#24	Ring Gear	1
3	1922B#03	Inlet Bushing	1	25	1922B#25	Coupling Nut	1
4	1922B#04	Throttle Lever	1	26	1922B#26	Ratchet Housing Assembly	1
5	1922B#05	Throttle Lever Pin	1	27	1922B#27	Crankshaft Bearing	1
6	1922B#06	Throttle Bushing	1	28	1922B#28	Crankshaft	1
7	1922B#07	Throttle Valve O-ring	1	29	1922B#29	Drive Bushing	1
8	1922B#08	Throttle Valve Assembly	1	30	1922B#30	Ratchet Yoke	1
9	1922B#09	Valve Spring Seat	1	31	1922B#31	Ratchet Anvil Assembly	1
10	1922B#10	Throttle Spring	1	32	1922B#32	Reverse Button Stop Pin	1
11	1922B#11	Housing Plug Seal	1	33	1922B#33	Wear Washer	1
12	1922B#12	Housing Plug	1	34	1922B#34	Ratchet Spring	1
13	1922B#13	Rear End Plate Assembly	1	35	1922B#35	Ratchet Lock Pin	1
14	1922B#14	Rear End Plate Dowel	1	36	1922B#36	Ratchet Pawl	1
15	1922B#15	Cylinder	1	37	1922B#37	Reverse Button	1
16	1922B#16	Vane Packet	4	38	1922B#38	Detent Spring	2
17	1922B#17	Rotor	1	39	1922B#39	Detent Ball	2
18	1922B#18	Front End Plate Assembly	1	40	1922B#40	Pawl Retaining Pin	1
19	1922B#19	Front End Plate Dowel	1	41	1922B#41	Thrust Washer	1
20	1922B#20	Front Rotor Bearing	1	42	1922B#42	Anvil Retaining Ring	1
21	1922B#21	Planet Gear	3	43	1922B#43	O-ring	1
22	1922B#22	Gear Head Pin	3	44	1922B#44	Muffle Cover	1