




A-5527 6MM Die Grinder

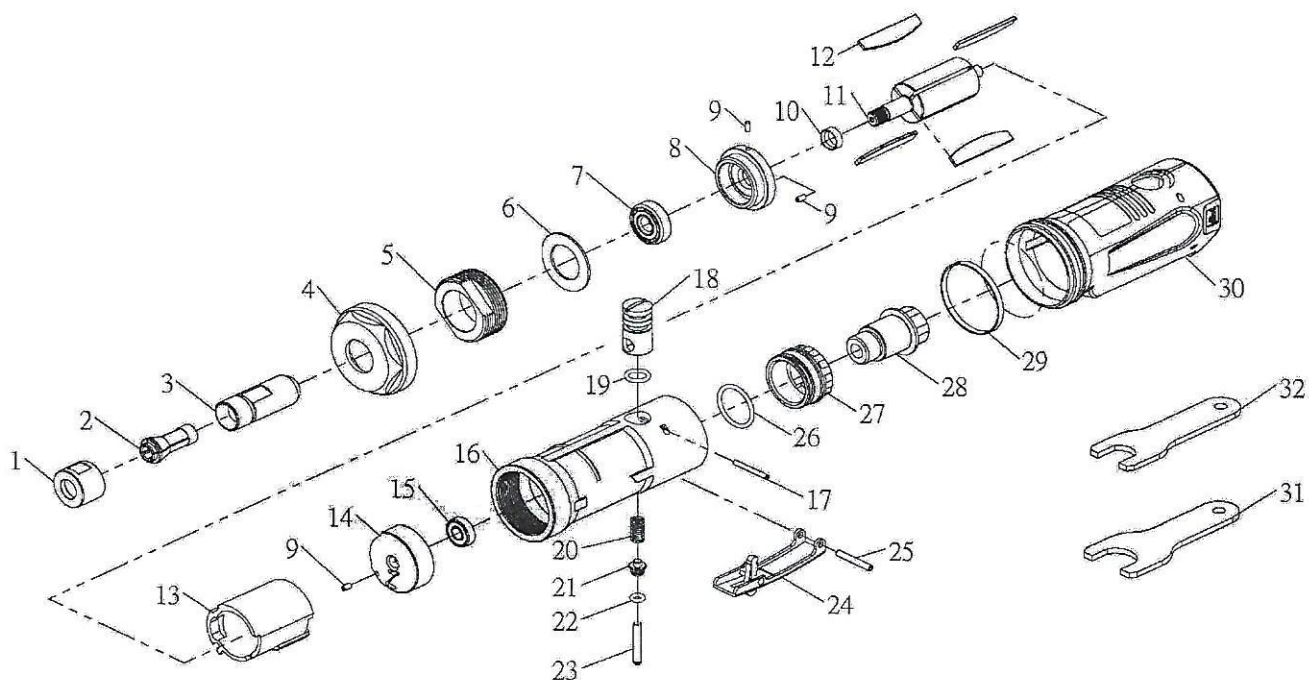

Index No.	Parts No.	Description	Q'ty	Index No.	Parts No.	Description	Q'ty
1	5527#01	Collet Nut	1	17	5527#17	Spring Pin ($\phi 2.5 \times 20$)	1
2	5527#02	6mm Collet	1	18	5527#18	Valve Screw	1
3	5527#03	Spindle	1	19	5527#19	O-Ring (P010A)	1
4	5527#04	Coupling Nut	1	20	5527#20	Valve Spring	1
5	5527#05	Lock Ring	1	21	5527#21	Throttle Valve	1
6	5527#06	Aluminum Spacer	1	22	5527#22	O-Ring (P4)	1
7	5527#07	Ball Bearing (608ZZ)	1	23	5527#23	Valve Shaft ($\phi 3.9 \times 24$)	1
8	5527#08	Front End Plate	1	24	5527#24	Safety Lever Ass'y	1
9	5527#09	Spring Pin ($\phi 2.5 \times 5$)	1	25	5527#25	Spring Pin ($\phi 3 \times 22$)	1
10	5527#10	Bearing Spacer	1	26	5527#26	O-Ring (S22.4)	1
11	5527#11	Rotor	1	27	5527#27	Exhaust Sleeve	1
12	5527#12	Rotor Blade	4	28	5527#28	Inlet Bushing	1
13	5527#13	Cylinder	1	29	5527#29	"O" Rubber Band	1
14	5527#14	Rear End Plate	1	30	5527#30	Housing Cover	1
15	5527#15	Ball Bearing (696ZZ)	1	31	5527#31	(#19)Spanner Wrench Set	1
16	5527#16	Motor Housing	1	32	5527#32	(#14)Spanner Wrench Set	1